

Register your product

Register your appliance now and enjoy exclusive benefits.

Everything for your Oohanee power cleaner and even more for you: register your power cleaner and enjoy great benefits. You can look forward to superb service, latest information, tips and lots more.

<https://www.thiruvinai.com/product-registration/>



Thiruvinai

Thiruvinai Inno Solutions

158/2 Madambakkam main road, Madambakkam.

Chennai - 600126



7397455208



service@thiruvinai.com



www.thiruvinai.com

Oohanee



Thiruvinai

**Instruction Handbook for installation,
Operation and Maintenance**

Welcome to Oohanee

Dear customer,

At the outset, allow us to thank you for your trust in Oohanee power cleaner. At Thiruvinaï, we take pride in Innovation and product quality. We are certain that your decision to own a power cleaner will go a long way towards keeping the sanitaryware and kitchen sink sparkling clean, hygienic, and fresh. We are confident that you will be more than satisfied with its performance and that it will serve your needs for safer and convenient cleaning with lesser effort.

This manual would help you in getting the best out of your Power cleaner. Please go through the booklet to familiarize yourself with operation and maintenance.

You can look forward to years of trouble-free service. In case you require any further information, please contact our customer support.

House cleaning with a difference

Team Thiruvinaï

Table of contents

1. Introduction.....	1
2. Features of power cleaner.....	1
3. Know your product.....	2
4.Items in the box.....	2
5.Assembling your power cleaner.....	2
6.Attaching / Detaching.....	3
7.Using your power cleaner.....	3
8.Important instructions.....	4
9.Cleaning and maintenance.....	5
10.General safety instructions.....	5
11.Troubleshooting.....	6
12.Important Safety instructions.....	7
13.Warnings.....	7
14.Technical specifications.....	8
14.Your Guarantee.....	9

Introduction

We at Thiruvinai have always believed that a clean and healthy life is a right of every individual. This ethos made us embark on the journey to develop innovative solutions that can make cleaning tasks especially sanitaryware cleaning a little less annoying and tiring.. Using innovative technology, we have been able to create a product that helps you to get a Fresh, Hygienic and sparkling clean sanitaryware and kitchen sink.


Continuing with the Innovation, we now present the power cleaner, with futuristic and state of the art technology that helps to maintain clean, and spotless sanitaryware effortlessly.

In power cleaner, motor driven brush delivers better cleaning with lesser effort at every inch of the sanitaryware. The power cleaner is ergonomically designed for a better grip along with a lengthy metal arm assists you to clean the sanitaryware from a safe distance without deforming the body.

Features of power cleaner

- 1.The right cleaning brushes for the right task:**
Three cleaning brushes are supplied for a variety of cleaning tasks. The right choice of brush and power driven, where you need it to clean the sanitaryware and kitchen sink effortlessly.
- 2.‘Stay safe’ hygienic cleaning:**
The lengthy metal arm brush with power driven provides a ‘Stay safe” mechanism hygienically – so there’s no need to bend or stay closer to the sanitaryware while cleaning.
- 3.Drop-in docking:**
The Oohanee’s power Cleaner drops into the wall-mounted bracket, to charge it and tidily store tools. So, it’s ready to grab and go.
- 4.Ultimate finish:**
The power cleaner has a long handle with multi-colored dense bristles. The ABS plastic handle and quality fiber bristles ensure durability.
- 5.Nice grip:**
The handle of the power cleaner is made up of good quality ABS plastic and gives a non-slippery grip to hold so that you can use it easily.
- 6.Multiple uses:**
The product is suitable to clean your kitchen sink, bathroom tiles, wash basin, bathtub, sanitaryware etc. easily and give a sparkling and shiny surface.
- 7.Light weight everyday essentials:**
This cleaner is extremely lightweight and is very easy to clean without getting tired.
- 8.Superior quality that lasts long:**
Handle is made up of ABS plastic which is very sturdy and hard and has a longer lifespan.
- 9.Carefully designed for your convenience:**
The ergonomic shape facilitates better cleaning of Toilet bowl, Bathroom tiles, Bathtub, wash basin and kitchen sink.
- 10.Powerful Motor:**
The product features a powerful motor that supports the processing of tough stains on the sanitaryware.
- 11.Longer runtime:**
The Li-on battery used in the product can support cleaning up to 120 minutes*. Super-fast full recharging in 2 Hrs. Need not to wait for full charge. Even 10 minutes of charging helps you to clean the wash basin *.

Know your Product

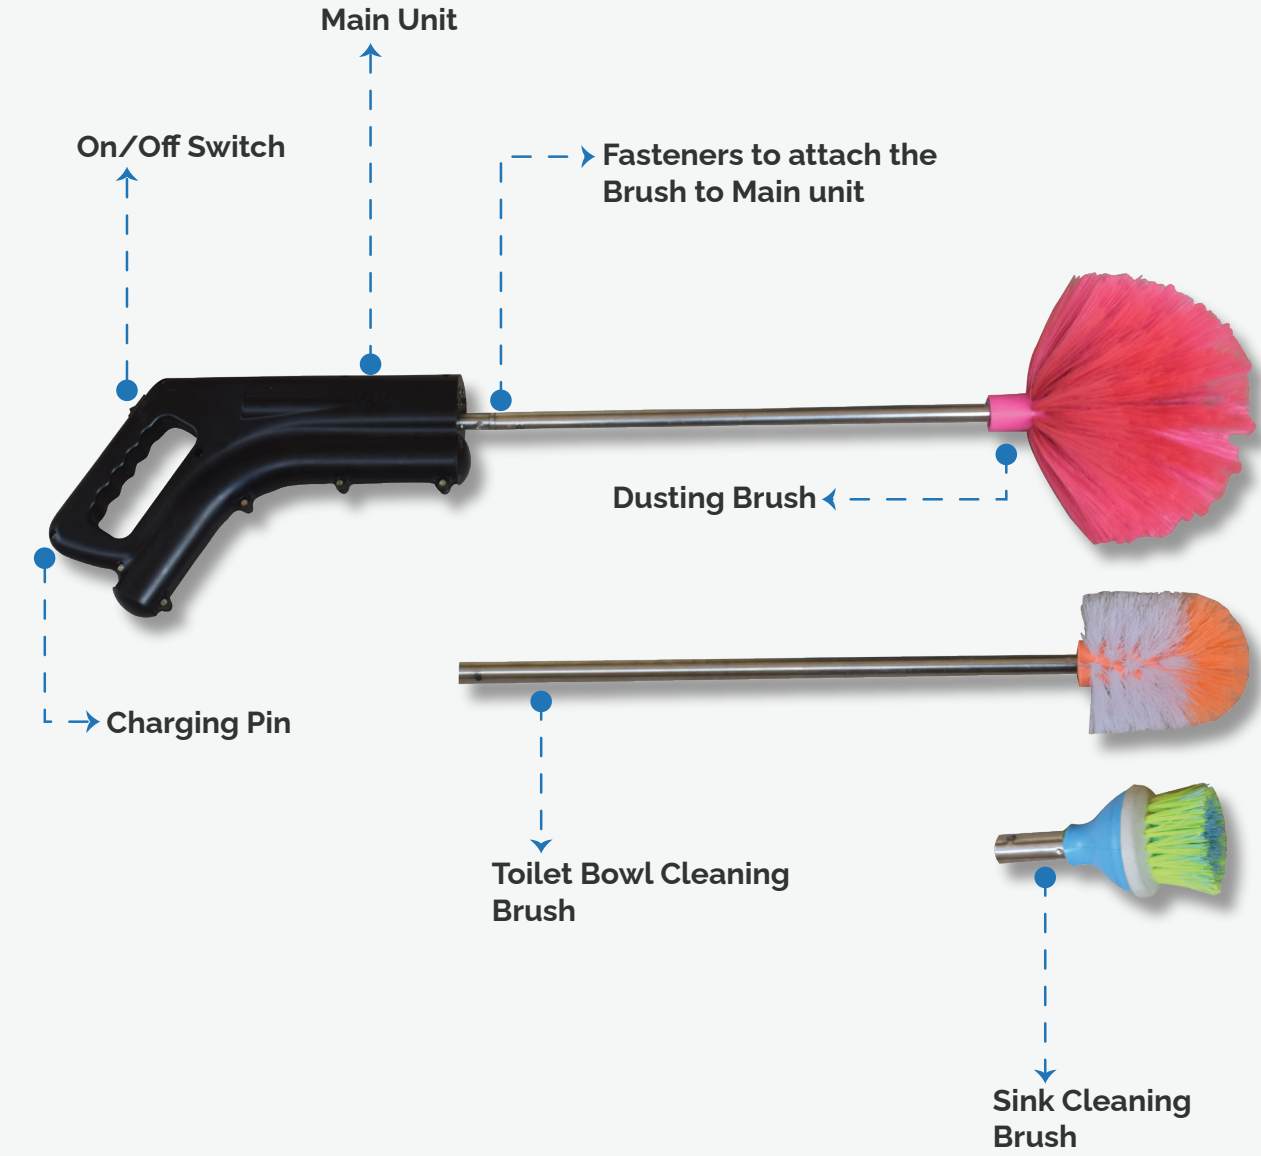

Items in the box

1. Power Cleaner (Main unit)	: 1 N	5. 12v DC adapter	: 1 N
2. Toilet bowl cleaning brush	: 1 N	6. Wall Mount bracket	: 1 N
3. Sink Cleaning brush	: 1 N	7. User Manual	: 1 N
4. Dusting Brush	: 1 N		

Assembling your power cleaner

- 1. Unpack the unit and remove any stickers that can prevent unit operation.
- 2. Check the unit for damages. Do not use it in case of any damages.
- 3. Battery comes with enough charge. So, it is ready for use.
- 4. Connect the Toilet cleaning brush to the pipe.
- 5. Connect the Dusting brush to the pipe.

Attaching / Detaching

Connecting Toilet Cleaning Brush

1. Hold the Toilet cleaning brush and push it gently on top of the shaft which is on the main unit.
2. Align the hole on the brush and hole on the shaft in the same line by rotating the pipe.
3. Insert the bolt through the hole and then fasten the nut at the other end of the bolt.
4. To detach the brush, unfasten the nut by holding the head of the Bolt. Gently pull out the brush from the main unit.

Connecting Sink Cleaning Brush

1. Hold the sink brush and push it gently on top of the shaft which is on the main unit.
2. Align the hole on the brush and hole on the shaft in the same line by rotating the pipe.
3. Insert the bolt through the hole and then fasten the nut at the other end of the bolt.
4. To detach the brush, unfasten the nut by holding the head of the Bolt. Gently pull out the brush from the main unit.

Connecting Duster Brush

1. Hold the Duster brush and push it gently on top of the shaft which is on the main unit.
2. Align the hole on the brush and hole on the shaft in the same line by rotating the pipe.
3. Insert the bolt through the hole and then fasten the nut at the other end of the bolt.
4. To detach the brush, unfasten the nut by holding the head of the Bolt. Gently pull out the brush from the main unit.

Note: Always remove the Charging cable from the main unit before fitting or removing accessories.
Do not switch on the Main unit while fitting the accessories.

Using your power cleaner

1. First attach the required brush with the main unit.

2. Power button

Click downward power on
Click upward power off

3. Toilet bowl cleaning brush

Push the brush to the main unit's shaft and fasten with bolt and nut to use Toilet bowl cleaning.

4. Sink cleaning brush

Push the brush to the main unit's shaft and fasten with bolt and nut to use sink cleaning.

5. Dusting Brush

Push the brush to the main unit's shaft and fasten with bolt and nut to use Dust removal.

6. Charging the unit

The adapter has 2 pins. Check the adapter pin that matches with the pin on the Main unit. Gently push the adapter pin to the Main unit pin.

Using the accessories

1. **Toilet bowl cleaning brush:** The Toilet bowl cleaning brush is ideal for cleaning the Toilet bowl that is difficult to clean with classical brushes. The lengthy metal arm brush with power driven provides 'Stay safe' mechanism hygienically – so there's no need to bend or stay closer to the sanitaryware while cleaning.
2. **Wash basin / Sink cleaning brush:** Helps to clean the basin/kitchen sink easily and comfortably. It removes the stains effortlessly. Easy to use and easy to reach the nook and corner of the basin.
3. **Dusting Brush:** Perfect accessory for your home improvement: Dusting Brush is a perfect addition to your existing home. Dusting Brush helps to get rid of dust and dirt from your shelves and surfaces quickly and effortlessly. Dust flies around every time and settles on your surfaces easily; therefore, you need to regularly dust your surfaces. Dusting of all the places is a tedious and time-consuming job. Having the power-driven duster will make your cleaning easier and faster. Perfect for tackling dirt in tricky areas.

Important instruction

Please avoid below actions (to prevent malfunction, overheat, fire electric shock and etc)

- This product contains Li-ion batteries which are intended for use in this product only. Please do not use them in other products.
- Please only use the power adapter included in the package.
- Please do not throw this product into fire.
- Please do not attempt to disassemble, repair or modify this product.
- Please do not recharge, use, or store this product near fire or in a high temperature environment.
- Please do not use the product continuously for more than 30 minutes. If you want to use it for more than 30 mins, please allow the motor to cool down for 5 – 10 minutes in between.

Caution

- Never clean burning matches, glowing ashes or cigarette butts.
 - Do not use the Power cleaner for cleaning up chemical products, stone, gypsum, cement or similar particles.
 - Do not use the cleaner for cleaning the surface which is in contact with any liquids other than water.
 - This appliance is not suitable for use with inflammable and explosive substances or chemicals and aggressive liquids.
 - Please do not charge it when either the power adapter or the power cable is damaged. Misuse under such conditions may cause overheating, or fire hazard.
 - Please do not touch the rotating pipe or rotating brush when the unit is switched on otherwise fingers may get caught into the brush or get hurt by the rotating pipe.
 - Please avoid...
1. Putting this product under running water (except for the parts that are washable).
 2. Touching the plug, a power cable with hands.
 3. Damaging the power cable or the plug or Pipe.
 4. Note: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or Lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 5. Do not allow children to play with the device or the packaging due to a danger of suffocation.
 6. Never leave the appliance unattended while in use.
 7. Keep the appliance out of reach of children.

Cleaning and Maintenance

- Switch off and unplug the appliance before cleaning it
- Note:** Never use gasoline, solvent, aggressive cleaning agents, metal objects or hard brushes to clean the appliance.
- Replacing Brushes.
 - When you notice that the brush is wobbling, it is the time for replacing the Brushes.
 - If the bristles on the brush are worn out, replace the brush.
 - Do not attempt to tighten any of the bolts and nuts.
 - Do not try to service the appliance on your own. Send it to an authorised service center.

General safety Instructions

When using an electrical appliance basic precaution should always be followed including the following:

- Please avoid dragging the main unit in horizontal direction.
 - Please avoid continue using the Appliance when the brush is worn out or other connected parts including pipe are damaged.
 - Please avoid pulling or stretching the power cable.
 - Please avoid direct sunshine or store near heat or fire.
 - Please store this product in a clean dry area.
 - Please turn off the device and take off the brush before cleaning it.
- Note:** This product is intended for home use only and is not intended for industrial use.
- Please do not clean the following objects.
 1. Construction dust.
 2. Fire extinguisher powder.
 3. Strings and rope.
 4. Things that could entangle with moving parts.
 - Please do not keep the unit running if the moving parts are entangled with any objects.
 - Please do not play with the power plug.

Caution:

Please read carefully before using the power adapter

- The power adapter is for indoor use only.
- The power adapter is for use with the models specified by this manual and is not intended for any other appliances.
- Please make sure to push the plug all the way into the power socket.
- Always use the power adapter supplied with the product.
- Never operate the appliance with a power adapter.
- Please unplug the power adapter before cleaning or maintaining the product.
- Please unplug the power adapter if you are not planning to use this product for a while.
- In case of malfunction please switch off the unit immediately and pull out the brush from the main unit.

Troubleshooting

Problem	Possible cause	Possible solutions
Recharging	Indicator light at the Adapter is off	1. Is the Adapter power plug pushed all the way into the wall socket? 2. Is the wall socket power enabled?
	Battery runs out very quickly after recharging	1. Is the environment too hot or too cold? Please recharge in an environment which is between 5°C – 35°C (41°F – 95°F). 2. Is the battery fully recharged for 1.5 - 2 hours ? 3. Is it possible that the lifetime of lithium-ion batteries is up?
Operation	1. Unit does not turn on 2. Unit suddenly turns off after just a short time of cleaning	Is the battery drained out? Please fully charge the battery.
	Cleaning becomes weaker than normal	Is the battery fully recharged for one and a half to two hours ?

Warnings

Read this instruction booklet carefully

- This appliance is for domestic use only. Use as described in this instruction booklet. Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm.
- DO NOT hold off the rotating parts while the main unit is running.
- Do not use it in the flammable or explosive place.
- Do not hold off rotating parts as it may cause severe injury.
- Do not use the appliance to clean all these :
 - o Lighted stub, hot ashes and other combustible things.
 - o Oily substances.
 - o Sharp matter.
 - o Those things that can produce lather like washing powder, cleanser etc.
- We suggest you do not use it as a producer's equipment.
- Always remove the plug from the power socket when the appliance is not in charging and before carrying out any cleaning or maintenance operation.
- Keep the power cleaner away from the direct radiation sunshine and the place with high temperature. Heat can deform and discolor the plastic parts of the unit.
- Check the brush and metal pipe periodically. Replace it in time if there is any way damaged.
- Rotating parts can cause severe injury. Keep hands, feet, hair and clothing away from all moving parts to prevent injury.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Never use methylated spirits or other solvents to clean the appliance.
- Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm.
- Do not switch the appliance on if it appears to be faulty in any way.
- Do not remove the plug from the socket by pulling the cable or the appliance itself.
- This appliance can be used by children 12 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 12 years old.

Important Safety instructions

When using an electrical appliance, basic precaution should always be followed,

1. Do not leave the Power cleaner switched on when plugged in. Switch it off when not in use and before servicing.
2. Use the appliance only as described in the manual.
3. Always use manufacturers recommended attachments only.
4. Do not bring the appliance closer to the body when the main unit is running.
5. Do not use the appliance if the cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own. Send it to an authorized service center.
7. Do not unplug the appliance by pulling the cord. Always unplug by putting the plug out the cord.

8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
10. Use extra precaution while cleaning stairs.
11. Do not use the appliance to clean any flammable or combustible liquid such as gasoline and also do not use it in the areas where they may present.
12. Do not clean up anything that is burning or leaving smoke, such as cigarettes, matches or hot ash.
13. This appliance is suitable for indoor use only.
14. Keep away from the reach of children.
15. This appliance is not designed to be used by people who are physically or mentally disabled mentally handicapped or lack the relevant experience and knowledge unless a person responsible for their safety uses the product with supervision and guidance.
16. Do not put your finger or any object over moving parts. Do not touch the moving parts during use. Be extra cautious when children and infants are around during use.
17. Take care that curtains or other objects are not tangled with moving parts during operation.
18. Do not wash the appliance with water which will damage the functioning of the main unit.
19. To avoid fire or shock hazard, the main unit should ONLY be charged with a supplied DC Adapter.
20. Do not attempt to tighten any of the bolts and nuts.
21. Do not operate the device continuously for more than 30 minutes.
22. Do not leave the appliance on unattended.
23. Charge the device no more than 3 Hrs. continuously.
24. Do not charge the device overnight.
25. Do not use an incompatible power adapter which may cause failure of product function and/or fire accident. Always use the power adapter supplied with the product.
26. DO NOT hold off the rotating parts while the main unit is running.

Technical specifications

Product	Oohanee Electrical Power cleaner
Product code	EPC2022A
Product dimension	Length 370 mm (without brush); Height 180 mm
Product generic name	Electrical Power cleaner
Input power supply	Single phase 110-240 V , AC 50-60 Hz
Noise	<=80 dB
Battery	Lithium-Ion, 2.2 Ah
Charging time	1.5 - 2 Hrs
Working time	120 Mins*

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Thiruvinai must be notified of the fault.
- Proof of purchase must be presented to Thiruvinai's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Thiruvinai.
- The warranty applies for the use of the product in INDIA only.

What is **NOT COVERED**:

- Warranty does not include freight charges.
- Warranty does not include consumable items such as Brush, Bolt and Nuts.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature, Power adapter which was not supplied with the product.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

